




Ice watch

Getting started

Remove the plastic stopper (in the direction of the arrow).



Press
the winder.

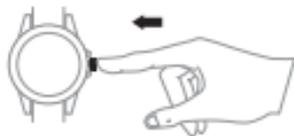


Instructions

Ice-Watch must be serviced regularly in order for it to work correctly. The length of time between services will vary depending on the model, climate and the care you take of your watch. As a general rule, we recommend the following steps so that you can keep your watch in tip-top condition for as long as possible.

- Temperature: avoid temperatures below 0°C (30°F) or above 35°C (100°F).
- Avoid prolonged exposure to sun, steam, contact with alcohol, detergents, perfume or cosmetic products to prevent distortion, discoloration or any damaging reaction.
- Do not use any watch or chronograph buttons while under water to prevent water from entering the mechanism.
- Use within 10 ATM water resistant standard.

The information contained in this document belongs to ICE Universal Ltd and may not be reproduced without its authorisation.

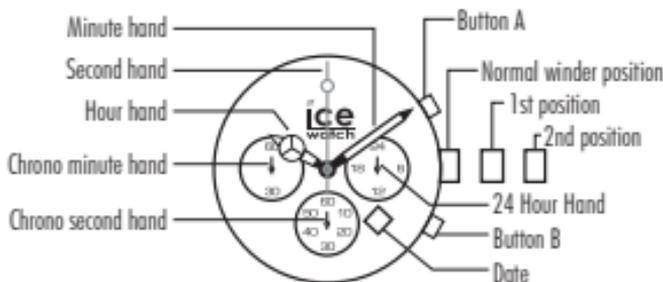

A) SETTING THE DATE

1. Gently pull the winder out to the 1st position.
2. Turn the winder anticlockwise to set the date. If the date is set between around 9pm and 1am, it is possible that it will not change the next day.
3. Return the winder to its normal position.

B) SETTING THE TIME

1. Gently pull the winder out to the 2nd position.
2. Turn the winder to set the hour and minute hands to the correct positions.
3. The second hand starts again when the winder is pushed back into its normal position.

C) USING THE CHRONOGRAPH

1. Press button A to start and stop the chronograph (stop watch).
2. Press button B to re-set the chronograph.

D) CHOOSING THE CHRONOGRAPH'S START POSITION

1. Gently pull the winder out to the 2nd position.
 2. Press button A to set the chronograph second hand to the desired start position. Hold down button A if you want to move the chronograph hand forward quickly.
 3. Return the winder to its normal position.
- You should also use this procedure if the chronograph hand does not return to its start position after you press button B, as well as when you replace the battery.*